


1) Material Check

Verify that the material is intact and matches your order.

Follow the installation diagram included in the box, respecting the numbering of the rolls.

Each roll has 5 cm of excess material on the upper edge of the sheet, and 5 cm of excess material on the lower edge, plus a 2 cm black strip indicating the sheet numbering.

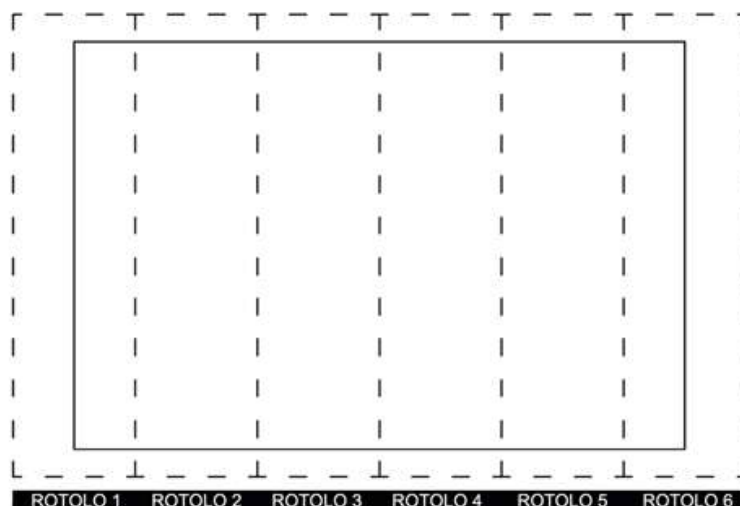

2) Wall Preparation

The surface of the wall must be clean, smooth, dry, and free of any dirt or residue.

3) Marking the Width of the Sheets

Draw a line to outline the sheets, using a plumb line to help.

4) Preparing the Glue

Use wallpaper paste for TNT-backed wallpaper, following the instructions.

5) Applying the Glue

The TNT-backed wallpaper paste is applied directly to the wall, following the space for each individual sheet.

6) Installation

Start positioning the first roll by referring to the vertical line previously drawn on the wall.

Press the wallpaper roll onto the wall, trying to avoid air bubbles and making sure the edge lines up with the pencil line drawn earlier on the wall. The rolls should stick perfectly to the wall and be properly aligned side by side, not overlapping. Use a plastic spatula for assistance. Immediately remove any excess glue. If there are mistakes, remove the sheet and reposition it.

7) Trim the excess of the fabric

Trim the excess of the fabric with a sharp cutter, using a spatula to help.

Important:

The color printed on the material is eco-friendly, water-based. It's very important during installation that any excess glue is immediately and gently wiped off with paper or a dry sponge, without rubbing too hard. The printed surface should stay in contact with the glue as little as possible to prevent the surface layer of the color from getting damp. Even the spatula should only be passed over the surface after carefully and gently cleaning the printed area.

NOTE

The company does not take any responsibility for any damage or errors during installation, tears, scratches, discoloration that affect the final result of the work.

It is recommended installing the product in environments with temperatures between 10 and 38°C. Several factors can negatively affect the adhesive, such as dusty, damp, or dirty surfaces, mold release, or applying it outside of the recommended temperatures.

The color print on the material may vary slightly each time; this slight change can depend on several factors, such as humidity levels and how much the material absorbs.